



我的记录器萤幕为何一片空白，没有任何显示？

问：液晶屏无显示

A: 记录器默认处于睡眠模式(sleep mode)，停止记录时也不会显示。如果您希望它显示当前的温度或湿度，请转到记录器设置页面并切换到非睡眠模式(non-sleep mode)。

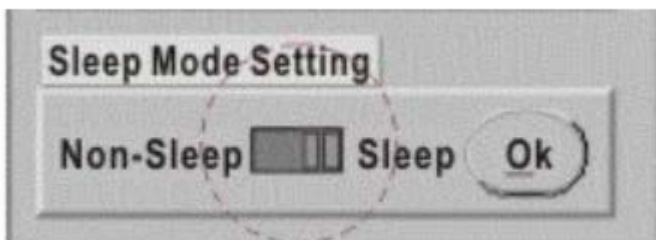


如果您的记录仪带有"on/off" 开关按钮，请检查 LCD 是否已关闭，才会无任何显示。

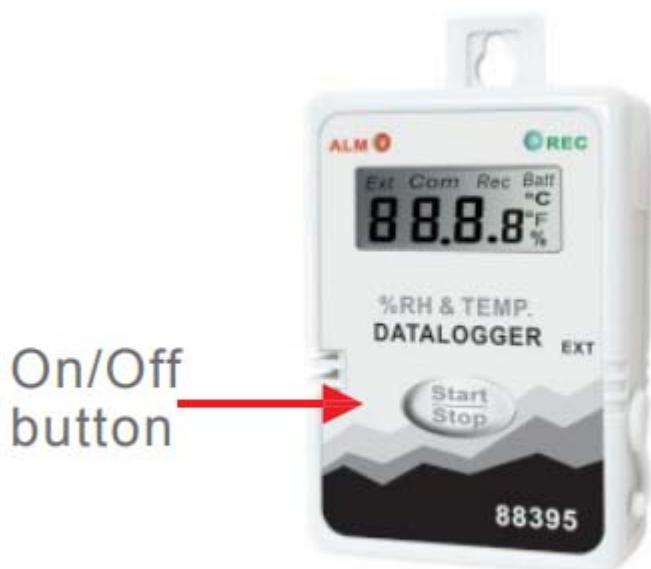

Q: The LCD is blank with No display.

A: The logger default is in sleep mode, so it won't display when it stops logging. Go to Logger Setting page and switch to non-sleep mode if you want it to display the current temperature or humidity.

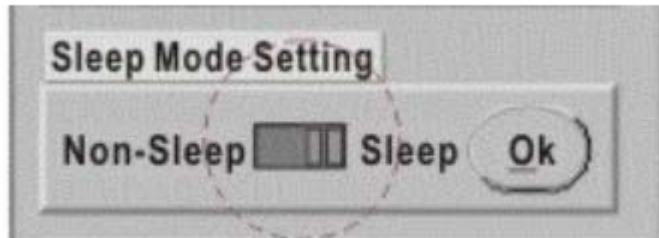

If your logger is with on/off button, check if the LCD was turn off.

