

**为什么每次重新启动记录器之前都需要配置 BLE 记录器？**

当记录仪重新启动时，之前记录的数据将被重新写入。重新配置记录仪是为了提醒用户在下次启动之前需要先读取记录的数据。

**Why I need to configure BLE logger everytime before re-start the logger?**

When logger re-start, the previous recorded data will be re-write. To configure the logger again is to remind user that they need to readout the recorded data first before next start.